




Mars 5 Ultra

3D Printer

User Manual

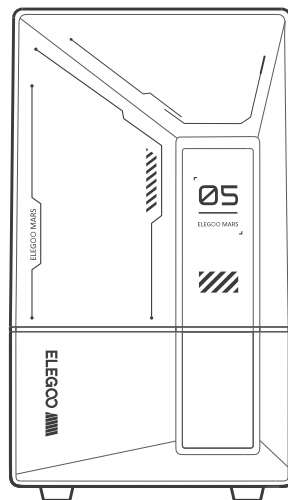

Thank you for purchasing ELEGOO brand products.

V2 ■

After receiving the product, please confirm whether the equipment is intact and the accessories are complete. If there is any damage or missing, please timely contact us at 3dp@elegoo.com. (To ensure the performance of each product, each product will undergo strict printing tests before leaving the factory. There may be some slight scratches when you receive the product, which is normal, please rest assured to use.)

ELEGOO

Notice:

- Please keep the 3D printer and its accessories out of the reach of children.
- Please fill the resin tank no less than 1/3 of its volume, but do not exceed the MAX line position.
- Please place the printer in a dry environment and protect it from rain and moisture.
- If you run into an emergency during use, please turn off the power supply of the 3D printer first.
- Please use the printer indoors and avoid direct sunlight and a dusty environment.
- Please keep the original packaging box for 30 days for return/exchange (only ELEGOO original packaging boxes are accepted).
- If the printing fails, you need to clean the excess cured resin in the resin tank and change the resin, otherwise, it may cause damage to your printer.
- When operating the 3D printer, please wear a mask and gloves to avoid direct skin contact with the photopolymer resin.
- If the release film in the resin tank is whitened, scratched, or has no elasticity, the printing failure rate is high, please replace the release film in time.
- Please use 95% (or higher) ethyl alcohol or isopropyl alcohol to wash your model unless you are using water washable resin.
- If you have any problems with the printer, please contact us at 3dp@elegoo.com. Please do not disassemble or modify ELEGOO 3D printers by yourself, otherwise, the warranty will expire, and damage caused by personal operating errors need to pay for repairs.

Contents

Packing List	01
Printer Introduction	02
3D Printer Tech Specs	04
Test Printing	05
Software Installation and Setup	06
Network Management Center	08
Machine Maintenance	11
Warranty Statement	12

Packing List


01




Mars 5 Ultra 3D Printer




Wifi Antenna




Build Platform



Resin Tank



AI Camera

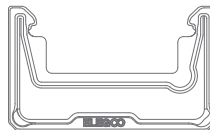


Resin Tray



USB Flash Disk



Mask



Gloves



Funnel



Backup Screws




User Manual




Adapter



Tool Kit



Scraper

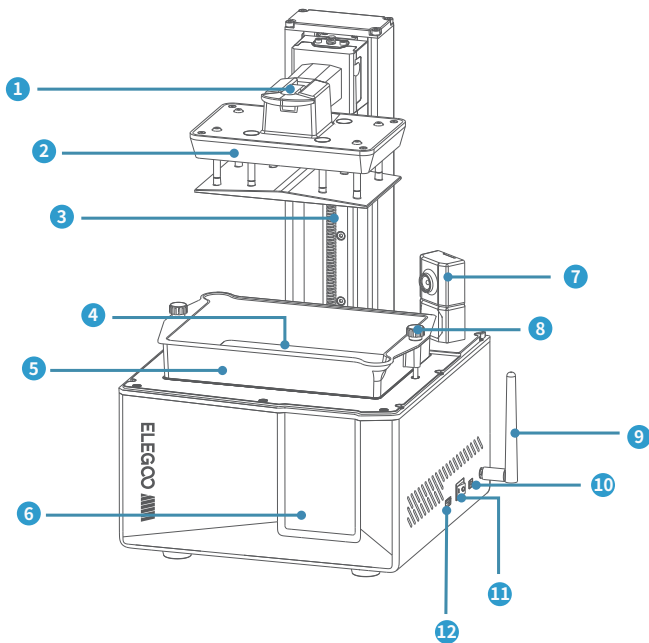

① Handle

② Build Plate

③ Z Axis

④ LCD Display Screen

⑤ Resin Tank

⑥ Touch Screen

⑦ AI Camera


⑧ Screw Knob

⑨ Wifi Antenna

⑩ DC Socket

⑪ Switch

⑫ USB Interface

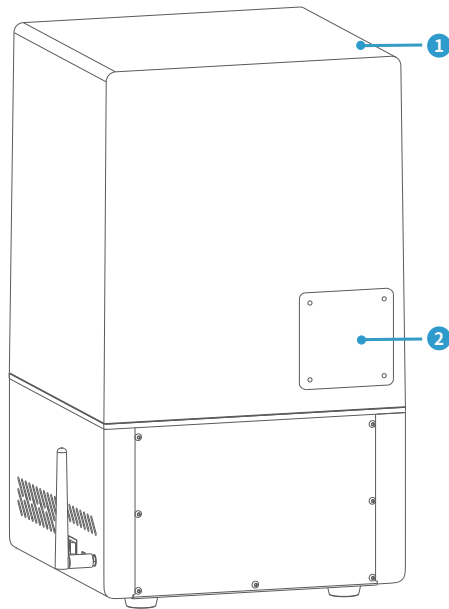

① Anti-UV Cover

② Extension Port

System: EL3D-4.0
Operation: 4.0-inch Capacitive Touch Screen
Slicer Software: Chitu Box
Connectivity: USB Interface & WiFi

Printing Parameter


Technology: MSLA Stereolithography
Light Source: COB Light Source (wavelength 405nm)
XY Resolution: 18*18um(8520*4320)
Z-axis Accuracy: 0.02mm
Layer Thickness: 0.01-0.2mm
Printing Speed: MAX 150mm/H
Power Requirements: 100-240V 50/60 Hz 24V 3A

Printing Specification

Dimension: 260mm(L)*268mm(W)*451.5mm(H)
Build Volume: 153.36mm(L)*77.76mm(W)*165mm(H)
Package Size: 555mm(L)*340mm(W)*370mm(H)
Gross Weight: 10.8KG
Net Weight: 8.8 KG

Hardware Specification

After inserting the build platform into the connecting block, press down the handle to secure the build platform to the connecting block (the build plate is capable of self-leveling and ready to use right out of the box).

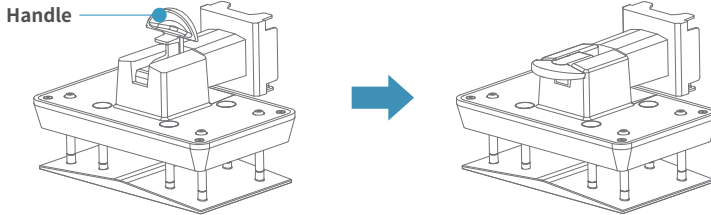


1. Model Printing

Slowly add the resin into the resin tank (the resin level is not less than 1/3 of the tank volume and does not exceed the MAX line). The machine will perform a self-check before printing, and do not touch the machine during the self-check). Cover the printer's anti-UV cover and then select the sliced test model for printing.

2. Model Processing

After printing is completed, wait until the resin on the build plate stops dripping, then lift the handle to take out the build plate, and use a scraper to remove the model. You can use ELEGOO's cleaning and curing machine to post-process the model.

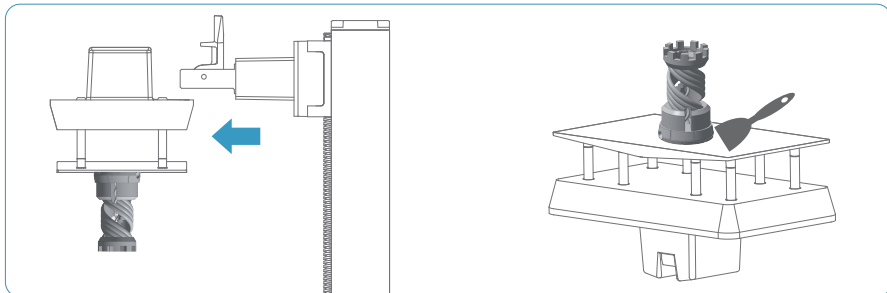

The printer can install and use the Chitu Box in the USB flash drive.

1. Install Chitu Box

Select from the USB flash drive or go to Chitu's official website (www.chitubox.com) to download the right slicing software version and install it on your computer.

2. How to Use Chitu Box

After the installation is complete, run the Chitu Box software. Click "File-Open File", then open your 3D model file (.stl type). By left-clicking on the model and using the options on the left menu, you can control and change the viewing angle, size, and position of the model.


3. Chitu Box Setting

3.1 Machine Configuration Parameters

Click "Parameter Settings" and select ELEGOO Mars 5 Ultra as your default printer. (See Picture 1)



(Picture 1)

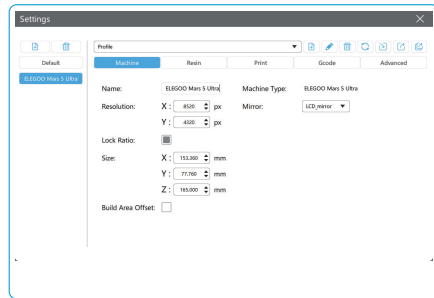

(Picture 2)


3.2 Build Volume

You don't need to change the default parameters (See Picture 2), and X indicates the maximum print size in the X-axis direction, and so on.

3.3 Resin Parameter (See Picture 3)

Resin Density: 1.1g/ml

Resin Cost: You can input the real price of the resin you purchased, and the slicing software can calculate the resin costs for each model you print.

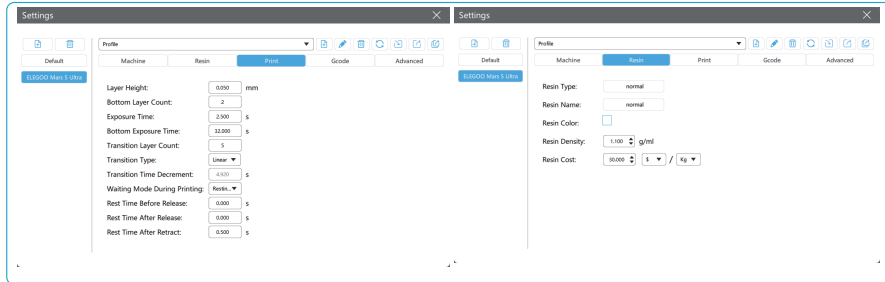

(Picture 3)

3.4 Parameters (See Picture 3)

Layer Height: The thickness of each printed layer, the recommended height is 0.05mm, but you can set it from 0.01-0.2mm. The higher the thickness you set, the longer the exposure time will be required for each layer.

Bottom Layer Count: The setting number of initial printing layers. If the number of bottom layers is n, the exposure time of the first n layers is the exposure time of the bottom layer. The default setting is 2 layers.

Exposure Time: The exposure time for normal printing layers. The default exposure time is 2.5 seconds, and the thicker the printing layer setting is, the longer the time it will take.

Bottom Exposure Time: The setting of bottom layer exposure time. Properly increasing the bottom exposure time can help to increase the stickiness between the printed model and the printing platform, and the default setting is 32 seconds.

Transition Layer Count: The number of transition layers after the bottom layers for a tighter bonding between layers. Except for the exposure time, other parameters of the transition layers are the same as the normal layers.

Transition Type: Set the transition type of exposure time when transitioning from bottom layers to normal layers, the default is linear transition.


Rest Time Before Release: The time difference between the end of print exposure and the start of printer release. The default is 0 seconds.

Rest Time After Release: After the printing platform is lifted, the time difference between the printer starts to rest and starts to return. The default is 0 seconds.

Rest Time After Retract: The time difference between the printer starts to rest after retraction and the start of exposure. The default is 0.5 seconds.


Note: The printing parameters listed in this manual are for reference only. In actual applications, please contact the official after-sales technical support to confirm the parameters based on comprehensive factors such as the machine model and resin (including type and color) used by the individual.

1. After the printer is connected to WiFi, open the slicing software and click  in the upper right corner to enter "Network Management Center" (You need to download and install Chitu Manager for first time use.) (See Picture 4)

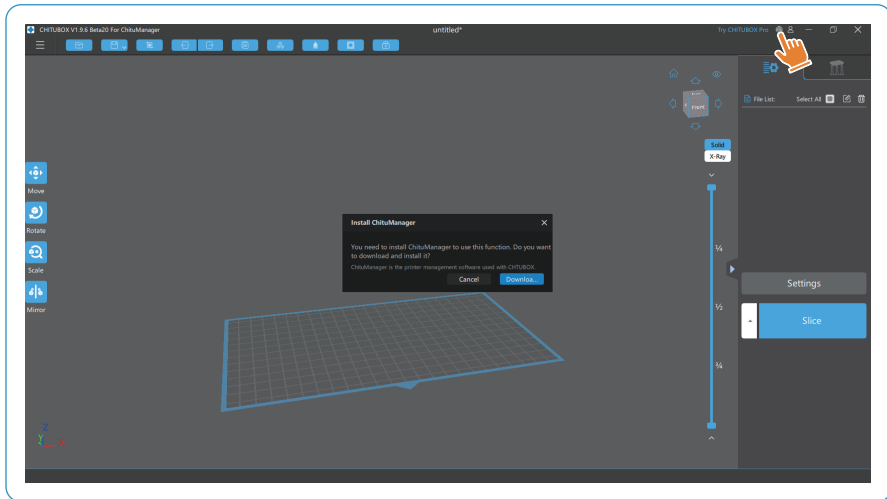


(Picture 4)

2. After entering the network management center, click "Add Device" to associate the printer (make sure the computer and printer are in the same LAN), and the associated device can be remotely controlled through the computer. (See [Picture 5](#))

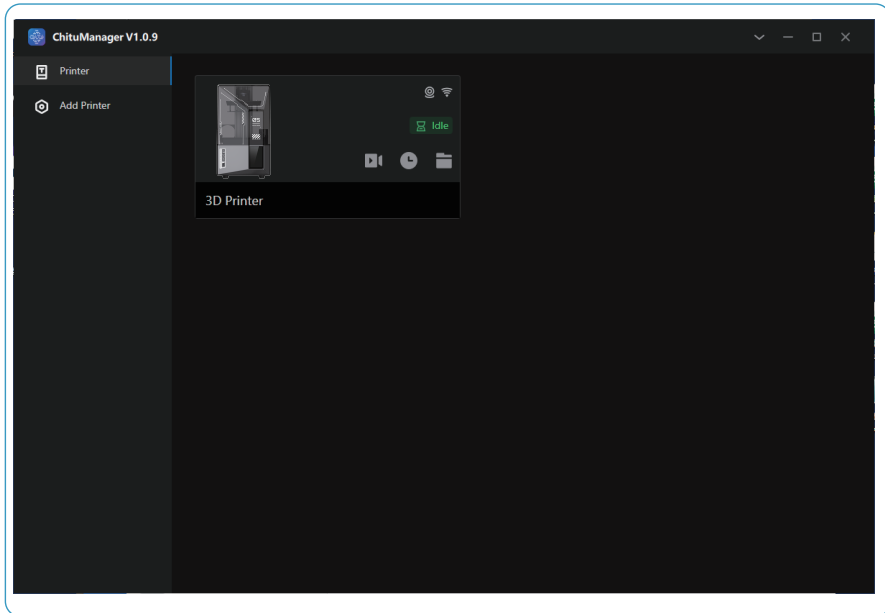

(Picture 5)


3. In the printer management interface, you can turn on the camera to observe the printing situation in real time, and you can also control the time-lapse photography function to turn on or off. (See Picture 6)

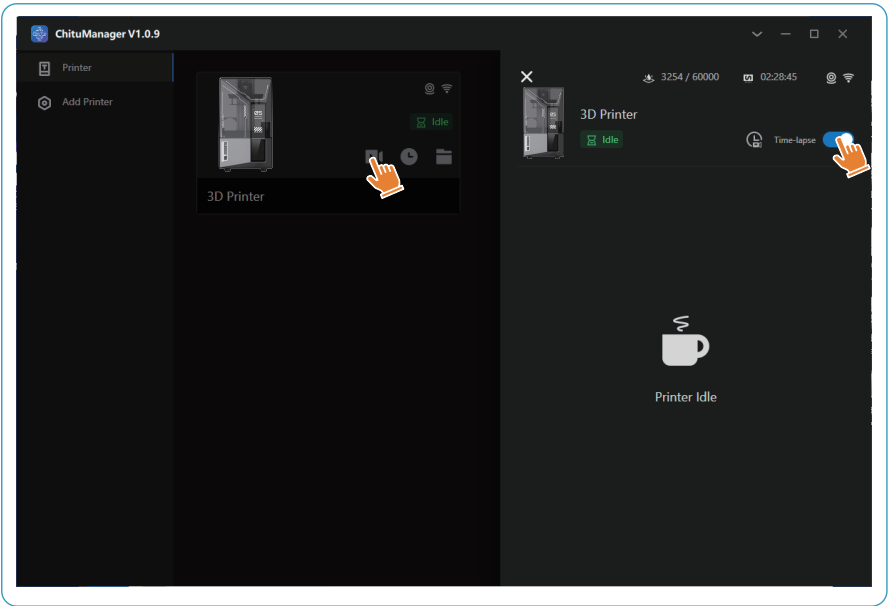

(Picture 6)

- Please do not use sharp or pointy tools to scrape the resin tank to avoid damaging the release liner film.
- Please clean up the resin tank before changing the resin to another color.
- Before and after printing, clean the build plate with paper towels or alcohol to ensure that there are no bumps or burrs on the build plate.
- Before each printing, daily check the exterior of the machine and all mechanical parts for any obvious damage, defects, or abnormalities.
- Try to keep the printing environment at 25-30 degrees Celsius when printing, and ventilate the printing room as much as possible to facilitate heat dissipation of the machine and resin odor volatilization.
- If the Z-axis keeps making friction noise, please add some lubricant to the lead screw. Please check and apply lubricant grease at least every 2-3 months, and increase the frequency of application as the printing frequency increases.
- If you don't use the printer in the next 48 hours, please pour the remaining resin from the resin tank back into the resin bottle and seal it well. If there is any residue, please use a filter to filter it out.
- The release film is a wearing part, please replace it regularly according to the machine prompts to ensure the success rate of printing.
- Please be careful when removing the printing platform to prevent damaging the LCD screen. The service life of the screen is about 2000+ hours and will decrease with increasing printing frequency. Do a good job of daily screen cleaning, and unplug the machine in time after printing. If there is a screen exposure problem or service life has seriously affected the print quality, please replace the screen in time.

1. From the date of purchase, ELEGOO printer is entitled to a 1-year free warranty service, except for consumables of the LCD screen and the release film.
2. The LCD screen enjoys a 6-month free warranty service.
3. The free warranty does NOT include problems caused by self-disassembly and improper use, and wear and tear of the machine housing, etc.

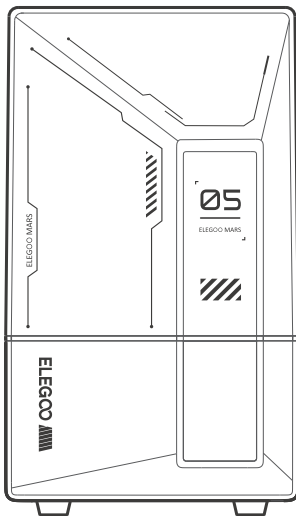

Email Support



Discussion Forums



Help Articles